


Circuit Breaker

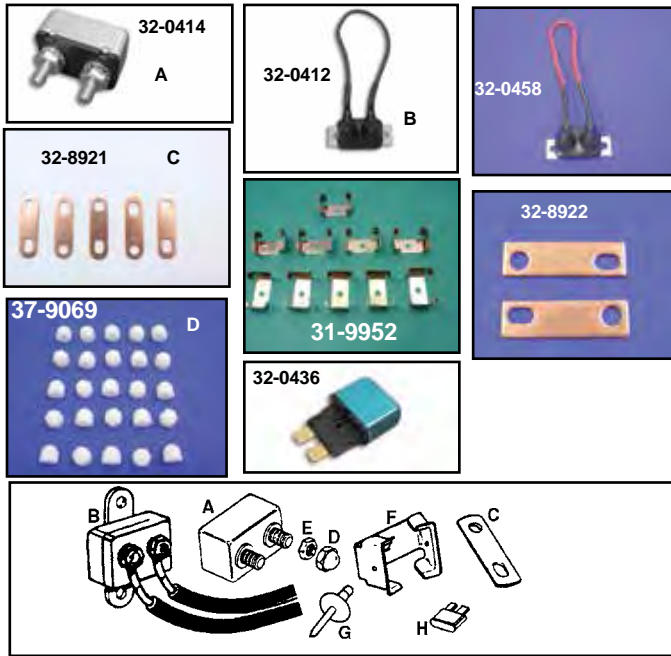

Circuit Breaker are stock replacements.

VT No.	#	OEM	Amp	Fits
32-0414	A	74589-73	15	1973-up FL, FX
32-1537		74589-73	15	10 pack
32-0413	A	74559-77	30	1978-up FL, FX
32-1536		74559-77	30	10 pack
32-0412	B	74594-71	20	1970-up Big Twin
32-0458	B	74586-30	30	1970-up Big Twin
32-0436	H	74587-94	15	1994-96 FL, FX
32-9207	A	74600-94	50	1994-up FL, FX
32-0460	A	74600-97A	40	1999-up FLT
32-8921	C	74598-73		Connector Bar, each
32-8922		69999-77		Connector Bar, each
32-8945		7/8" C/C		Connector Bar, pair
37-9069	D	7602		Nylon Nut, 1/2", 25 pack
12-0581	E	7629		Nut, 25 pack
31-9952	F	9952		Mount Clip, 10 pack secures breaker or flasher to fender
31-9964	G	8672		Rivet for Above



Circuit Breaker Bracket available for two or three circuit breakers, allows standard 15 or 30 amp breakers to snap firmly in place. Bracket has 1/4" holes, 5" apart and can be mounted to oil tank bracket or fender.

VT No. Breakers

31-0493	2
31-0490	3



Circuit Breaker Mount Rubbers hold breaker in place on FXST-FLST models. Replaces 70939-84A, 5 pack.


VT No. 28-0403 Terminal Boards

Terminal Blocks with terminal studs. 10-24 thread.

VT No.	Terminal
32-0502	4
32-0880	8
32-0879	12
32-0878	16



Ignition Switch

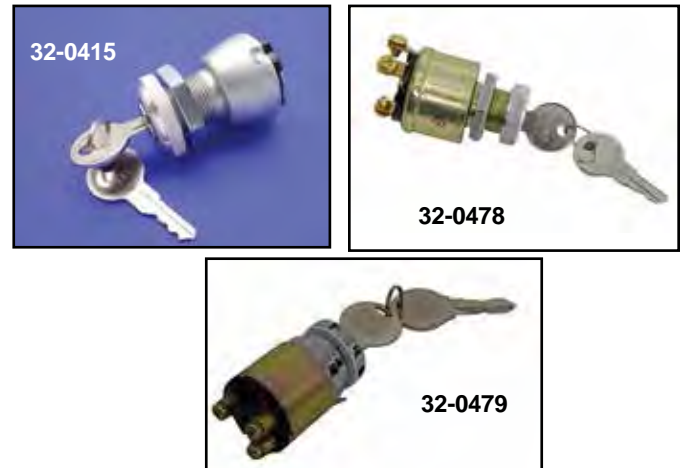

Universal Key Switch includes mounting ring and two keys.

VT No.	Type
32-0415	On-Off-On
32-0478	Off-On-Start
32-0479	Off-On-On



Ignition Switch.

VT No.	Type
32-8065	Mini
32-8114	Universal Ignition Switch
32-8111	On-Off Mini



Chrome Switch Bracket.

VT No.	Years	Type
42-0525	1982-90	FXR
31-0262	—	Universal

Weld On Ignition Mount accepts 32-0161 switch.

VT No.	Item
32-0180	Each
32-0820	Collar