



Foot Clutch Control Kit


BIG TWIN



22-0727
1986-99 ST
Kit

1986-99 ST Foot Clutch Kit includes chrome rocker assembly, cable bracket and spacer block.

VT No.	Finish
22-0727	Chrome
22-0732	Black

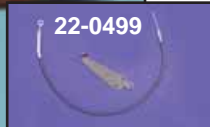


22-0499



21-0151

Note: Clutch is disengaged in heel down position.

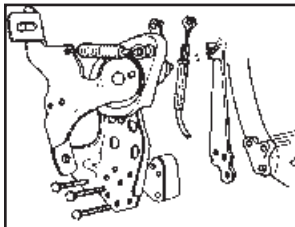


Foot Clutch Conversion Kit allows use of Police Rocker Clutch VT No. 22-0720 or 22-1016 on 1987-99 FXST-FLST where the clutch cable goes directly into trans side cover. Kit includes bracket & cable. May not be used with Front Engine Bar.



21-0163

VT No.	Item
22-0499	Kit (Bracket and Cable)
36-0516	Cable Only
21-0161	Spacer Block (.500)
21-0162	Spacer Block (.75)
21-0313	Spacer Block (1.25)
21-0178	Spacer Block (1.75)

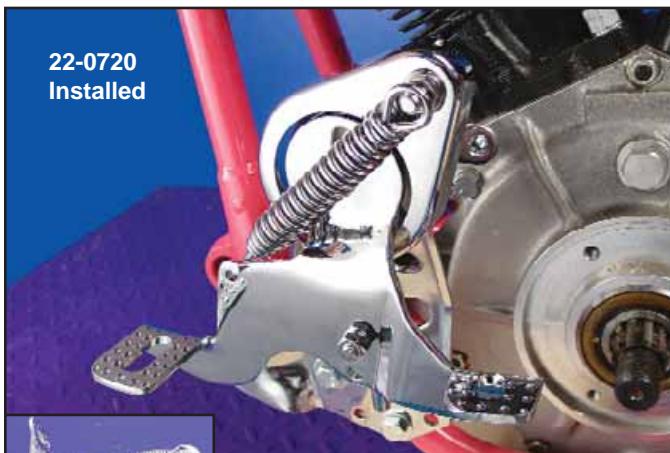

22-0720
Installed



21-0163



21-0151

Jockey Pedal Conversion Kit allows conversion of shift side of our Big Twin extended 2" + 3" forward controls to operate as foot clutch. Kit includes splined inner Billet arm, black bracket and black cable with ends. Order shift arm or kit separately for appropriate year.

VT No.	Year	Type	Model
21-0151	1987-up ST	5 Spd	ST
21-0163	1979-84 4	Spd	BT
21-0127	1991-up	5 Spd	FXD
36-0516	All	Cable	



Rocker Type Clutch Pedal Assembly. Replaces 36810-65A for 1936-78 Big Twins. When installed on any 1965-78 FL, 18-3606, clutch release arm must be used. Order appropriate rod separately. For 1965-up primary applications order VT No. 21-0313 Alloy Spacer Block separately.



21-0165

21-0166

Chrome Billet Spacers fit left side shift (3 hole) & right side brake (2 hole) for 1984-99 ST.

Shift	Brake	Thick
21-0175	21-0164	.50
21-0165	21-0166	.75
21-0167	21-0168	1.0
21-0169	21-0170	1.25
21-0171	21-0172	1.5
21-0173	21-0174	1.75

VT No.	Item
22-0720	Chrome Complete
22-1016	Black, with Chrome Spring Friction Cover
22-0997	Parkerized Replica