


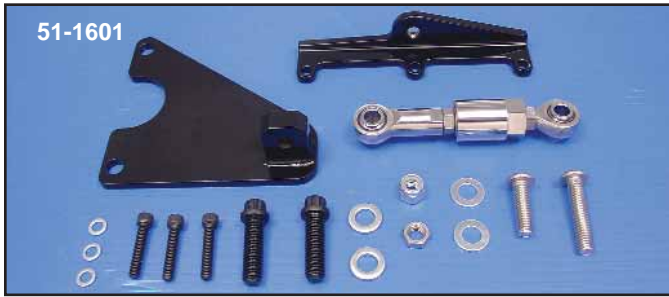

Touring Chassis Component

BIG TWIN



51-1601 Installed shown with 27-1235



51-1601 Installed



The Touring Torque Linkage System fits all Touring models. No modifications are necessary to install this unit, after the unit is installed it will eliminate the lateral movement while still allowing the Iso mounted factory design of the "floating" drive train to move vertically as designed through connecting the rear of the transmission case to the frame. The kit utilizes an isolation link with a urethane plunger so there is no contact between the frame and engine trans assembly, therefore reducing vibration. Fits 1993-08. Chrome number includes outer mount bracket in chrome.

VT No.	Finish
51-1601	Black
51-1602	Chrome

Note: Installation on 1993-2001 models require 27-1235 foot peg spacer set as shown. Purchase 27-1235 separately.



1998-08 Frame for FLHR accepts stock components for these years. Frame shipped in raw finish without swing arm. VT No. 51-0800



Chrome Fender Strut Covers do not include the "cut-out" that is included in stock covers on 1997 FLT models.

Provide a smoother look when not using a luggage rack. Fits 1997-up FLHT Standard and 1997-08 FLHR and 1998 FLTR models.

VT No. 42-0859



- This new wide tire / drive kit come complete with all bolt-on parts necessary to install without modification.
- Kits include new wide rear swingarm with a 1" axle, custom 14 gauge rear OE style fender, saddle bag support kit, drive components, billet primary spacers and all brackets & hardware necessary.
- Allows use of OE stock taillight, saddle bags & exhaust.
- Accepts 16" x 5.5" x 17" x 5.5" x 18" x 5.5" rear wheels & most tires up to 200mm wide.
- Requires a 20mm rear belt & pulley.
- Models with 18" rear use OE brake caliper, models with 16" rear require a smaller custom brake caliper.
- Installation of a tourpak or backrest will require OEM detachable docking hardware.
- Fits 02-06 FLHT, FLHR and FLTR touring models.

VT No. 51-1252