



# Rigid Rear Fender



50-0157



50-0143



50-0156



50-0744



50-0142



50-0179




50-1054



50-0931



50-1010

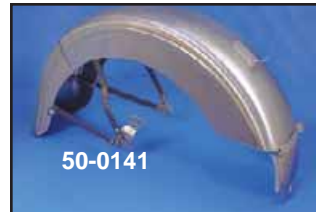

50-0141



50-0880



50-1159

**74-80 & 45 Rigid Rear Fenders.** VT No. 50-0143 & 50-0141 feature relief over skirts to accept stainless fender trim attached by clips. Fully assembled and riveted together with hinge. The 50-0142 has smooth skirts for 1949-57 Rigid Big Twin, VT No. 50-0744 has fender plate built in. **Big Twin**

VT No.	OEM	Fits
50-0143	59604-39	1947-48
50-0180	3111-36	1936-39
50-0156*	As Above	Narrow braces, 1939-46
50-0157*	As Above	Wide braces, 1947-48
50-0744	59604-49	1949-51
50-0142	59604-55	1949-57
50-0880	Bob	1936-57
50-1054	59699-39	1939-48, Tail Only
50-1053	59699-49	1949-57, Tail Only

\*Note: Features 2 piece spot welded skirt.

45 Solo		
50-0141	59612-41	1936-52
50-0179*	59612-41	1936-52 w/Narrow Braces
50-0168	—	1936-52 Skirt Set Only
50-1010	59637-36	1937-48 Fender plate
50-1053	59699-49	1949-57 only
50-1159	—	1936-52 Bobbed
50-0931	59851-39	Hinge and Pin
37-8840	59820-30	Pin
50-0553	59737-34	1934-46 Rear Tail Bracket




50-0913

**Stainless Fender Trim** for Rigid rear 1939-48 Big Twin and 45", Includes clips.

VT No.	OEM	Fits
50-0913	59882-39	Rear
37-8458	59225-39	Clips, 25 pack



31-0190



37-9204



31-0457



37-1507

**Fender U Clamp** is used on 1936-57 Rigid models. Secures rear fender to frame cross tube. Replaces 59800-36.

VT No.	Finish	Note
31-0190	Chrome	Order chrome carriage bolts separately
31-0457	Parkerized	
37-9204		Bolt set, when using rear frame bar
37-1507	Chrome	Carriage bolts



**Rigid Rear Fender Mounting Kit** includes hardware to install rear fender on 1936-57 BT or 1929-52 45's.

45 Solo	Big Twin	Finish
9791-15	8202-18	Cadmium
9790-15	9708-18	Chrome
9792-15	9707-18	Parkerized
—	2493-6	Parkerized



2493-6

**SS Strip Set Shown Installed Rigid Fender.**  
VT No. 50-1045

