




49-2508



49-2508 Installed



49-0791

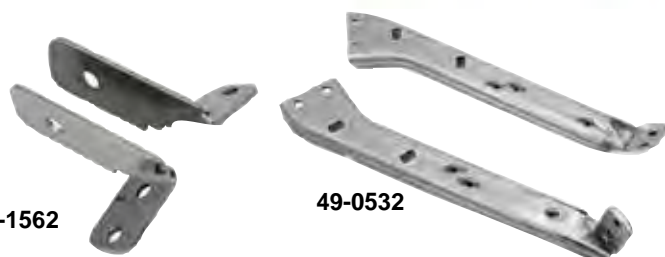

31-1562

49-0532

Chrome Saddlebag Guard Kit

- Includes chrome rail set (right and left) & mount brackets.
- Brackets are 15% thicker than stock for added support to prevent breakage.

VT No.	Item	Fits
49-2508	Kit	FLHT 1997-2008, FLHR 1997-2008
50-1205	Kit	FLHT 2008-13
50-1206	Kit	FLH 2014-up
49-0791	Brackets	FLT 1979-2013
31-1562		Repair Brackets, FLT 1979-2013
49-0532		Bracket, Heavy Duty, FLT 1979-2013
49-1724	Set	Forged Alloy
Bail Head Fastener Set. VT No. 49-1267		

50-0959



Chrome Saddlebag Trim Rail Kit

- Accents FL saddlebag top covers and offers protection from scratching.

VT No.	Fits
50-0959	FLT 1987-up



Saddlebag LED Lamp Kit

- Set of red LED lamps with red lens and the Touring electrical connection update kit. OEM# 68000082
- **Note:** Does not work with stretched saddlebags.

VT No. 49-0000



49-0798



49-0799

Chrome Lower Saddlebag Guard Sets

- Left and right saddlebag guards with a chrome finish.
- Eliminate the rear saddlebag guard for a sleek, custom appearance. The kit replaces the loop saddlebag guard with a bolt-on chrome plated support leg.

VT No.	Fits
49-0798	FLTR 2004-08, FLHRS 2004-08, FLHRX 2006-08
49-0873	2009-13 FLHX, FLT
51-0480	2009-13 FLHX, FLT
51-0482	2014-up FLHR, LHTC, FLHK

50-0873



50-1518



Saddlebag Guard Eliminator Brackets

- Go from the frame to the lower support bracket and replace the saddlebag guards and upper saddlebag rails.

Chrome	Black	Fits
50-0873	50-1518	FLT 1997-2008

50-1113



Chrome Saddlebag Rail Set

- Includes four chrome pieces to replace original.

VT No.	Fits
50-1113	FLT 1993-2008



Saddlebag Guard Bracket Kit

- Forged alloy heavy duty construction which is 15% thicker than stock for added support to prevent breakage. Mounts with stock hardware. Fits FLT 1979-2013.

VT No. 49-1724