



43-0514




Chrome Engine Dress Up Kits

• Include chrome parts and hardware for installation.

VT No.	Fits
43-0534	FLT 2001-2006 TC-88
42-0692	FLT 1999-2000 TC-88
43-0528	FLT 1994-1998
43-0515	FLT 1987-1988
43-0514	FLT 1985-1986



37-9185

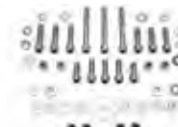

37-9186

Chrome Allen Screw Kit

• Connects motor mounts, front, top and rear to frame on models listed below. Knurled.

VT No.	Fits
37-9185	1987-90 FLT
37-9186	1991-07 FLT



8916-17T

Chrome Primary Cover Screw Kits

• Include all necessary screws and washers.

VT No.	Head Style	Fits
9959-38	Knurled	FLT 1999-2006
9959-38T	Knurled	FLT 1999-2006
8916-17	Allen	FLT 1985-1999
8916-17T	Allen	FLT 1985-1999



Starter Motor Chrome Cover

• For 2009-16 models.
• Conceals starter motor and solenoid for a cleaner look.

VT No. 42-0185



42-1167

42-1168



Starter Motor End Cover

• Dresses the end of the starter motor for a clean look on all 2017-up FLT models. Available with chrome or gloss black.

Black	Chrome
42-1167	42-1168

Lower Only			
9859-20	1989-99	FLT	Chrome
9928-20	1989-99	FLT	Allen
9928-20-P	1989-99	FLT	Polished Allen
Trans to Motor Mount FLT			
9935-8-P	1999-up	FLT	Polished Allen