



# Tappet Blocks for TC-88



**TC-88 Chrome Tappet Top** replaces 17964-99 front and 17966-99 rear. Fits 1999-up FXST-FLST-FXD and 1999-16 FLT.

VT No.	Type
10-0811	Top Kit
11-1403	Screw Kit



Fits 1999-up FXST-FLST-FXD and 1999-16 FLT.

**Chrome Billet Tappet Bases** for TC-88 models. Gaskets included. **VT No. 10-0815**




**Tappet Base Bolt Sets** for 1999-up TC-88 without taper. Fits 1999-up FXST-FLST, FXD and 1999-16 FLT.

VT No.	Type
9942-16	Allen
9942-16-P	Allen Polished

**Tappet Base Bolt Sets** for Big Twin models. **1976-up with Stock Tappet Blocks. 1/4" — 20 thread without taper.**

VT No.	Type	Finish
7628-8	Acorn	Chrome
8726-8	Allen	Chrome
8709-8	12 point	Cadmium
8708-8	12 point	Chrome
8710-8	12 point	Black
8709-8T	Hex	Zinc

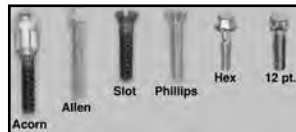

# Tappet Blocks for Evo



**Chrome Tappet Guide Set** includes front and rear tappet guide. Fits all 1984-99 1340 Evolution Big Twin.

VT No.	Item
11-9506	Tappet Block Set
15-1542	Gasket Kit



**Billet Tappet Blocks** are machined from solid blocks. Made and polished by Jims, sold pairs. Fits 1985-99 1340 Big Twin Evolution.

**VT No. 10-0069**




**S&S Tappet Block Sets** for V-2. The burnished aluminum finish matches S&S cylinder heads and crankcases. Blocks accommodate a cam, base circle of .960", with up to .630" lift. Screws and gaskets included.

VT No.	Fits
11-9290	Big Twin
15-0715	Gasket Rear
8708-8	Screws 12 point 1/4"-20 x 7/8"



**42-0437 Installed**

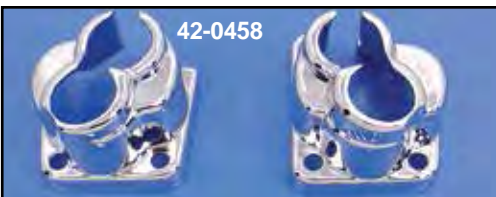

**Chrome Evolution Tappet Covers** fit over stock blocks. Each cover has a slot which allows it to be installed without removing pushrods. Install by lifting the pushrod tube cover and inserting the covers. Fits 1985-99 Big Twins.

VT No.	Type
42-0437	Steel
42-0458	Die Cast