
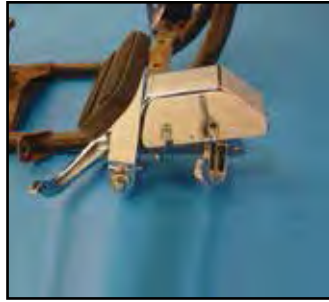


1986-99 Forward Control for FLST

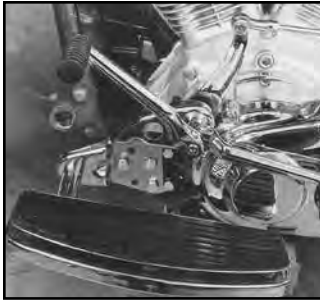

Brake Side Kit includes black or chrome backing plate, chrome pedal, chrome master cylinder and cover. Related hardware included. Order line separately.

VT No.	Item
22-0507	Complete Kit
22-0512	Complete Kit with chrome plate

Brake Side Components 1986-99 FLST.

23-9229	42407-87B	Brake Pedal Chrome
28-2233	42416-83	Rubber for above
23-9235	42431-87	Mount Plate, Black
23-9246	42431-87A	Mount Plate, Chrome
23-9236	50992-87	Rod End
23-0650	42468-87	Master Cylinder
28-2005	40922-87	Rubber Boot
42-0316	41745-79	Master Cylinder Cover
23-8822	40957-87A	Brake Line
23-9234	42301-87	Master Cylinder Stud
23-0759	5797A	Pedal Washer

FLST Brake and Shifter Control Mounts use these brackets and mounts to put FLST Controls and floorboards on 1984-99 FXST 5-Speed models. Order components separately or as kits. Floorboards not included.

Shift Side Kit includes chrome shift mount plate, 2 chrome shift levers with rubbers, chrome floorboard mounts, chrome inner and rod assembly. Related hardware included.

Shift Side

VT No. 22-0508

Shift Side Components 1986-99 FLST.


VT No.	OEM	Item
21-2061	33630-90	Shift Mount Plate
27-1692	50990-86B	Floorboard Mount Strap
27-1690	50989-86	Mount Stud
21-2065	33668-90A	Inner Shift Lever FLST
21-2042	33895-82	Lever, 2 used
21-2031	11729	Chrome Shift Rod Kit with Ends



2" Extension Kits



FLST Foot Control/Floorboard Extension Kit for 1986-99 models. 2" extension kit includes adapter plates and shifter rod.
VT No. 22-0307

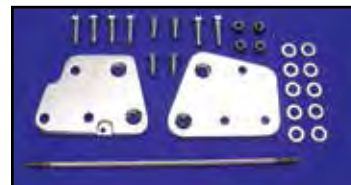

2" Footboard Extension moves controls 2" forward for 2000-2006 FLST.
VT No. 22-0306



COLONY

Chrome Hardware Kits for 2002-up V-Rod by Colony

VT No.	Item
2154-3	Front Axle Nut & Spacer Kit
2156-4	Rear Axle Nut & Spacer Kit
2158-11-P	Rear Shock Mount Kit
2160-1	Motor Oil Filter Plug & Dipstick
2161-2	Front Axle Cover Set
2167-2	Upper Case Plug
2171-17-P	Clutch Cover Mount Kit
2172-16-P	Alternator Derby Cover Mt Kit
2173-3-P	Sprocket Cover Mounting Kit
2175-4-P	Fork Bracket Mount Kit
2176-8-P	Frame Assembly Kit
2177-8-P	Shifter Mount Kit
2178-4-P	Headlamp Mount Kit
2179-7-P	Windshield Mount Kit
2180-12	Handlebar Master Cylinder Cover Allen Screws
1021-P	Polished Allen Show Bike Kit
2168-22-P	Polished Cam Cover Mount Kit

For V-Rod



Shock Absorber Mounting Kit includes spacers, allen polished screws, washers and nut. Fit 2002-up VRSCA. **VT No. 2158-11-P**



Motor Oil Filler Plug/Dipstick with O-Ring. Replaces 26541-01K. Fits 2002-up VRSCA. **VT No. 2160-1**



Rear Axle Covers add a smooth, finished look. Easily installed with a set screw. Fit 2002-up VRSCA. **VT No. 2163-2**



Rear Axle Nut and Spacers Kit available with smooth spacers. Replaces 43571-01 and 40437-01 spacers. Fits 2002-up VRSCA. **VT No. 2156-4**



Chrome Hose Shield fits V-Rod models. **VT No. 42-0965**



Front Axle Nut and Spacers Kit available with grooved or smooth spacers. Replaces 43642-01 spacers. **VT No. Type**
2153-3 Grooved
2154-3 Smooth



Upper Crankcase Plug and Gasket Kit. Custom knurled and decorative chrome plug with gasket. replaces 1034M and 6298M. **VT No. 2167-2**