



Strut for FLST models



50-1070



50-1069




50-1071




50-2042




50-2040

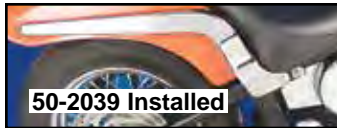

50-2039 Installed

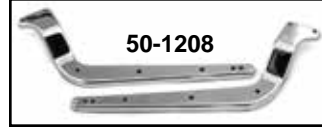

50-1208

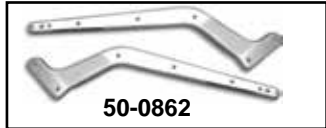

50-0862



50-0649

FXST Models

50-1070	Replica	1986-99
—	Smooth	
50-2040	Replica	2000-05
50-1208	Replica	2003-05
50-2039	Smooth	2000-05
50-0649	Replica	2006-07
50-0651	Smooth	2006-07
50-0862	Replica	2008-up
50-0861	Inner Strut	2008-up



50-0865



50-0863



50-0861

FLSTF

50-1071	Replica	1986-99
50-2042	Replica	2000-02
50-1208	Replica	2003-07
50-0862	Replica	2008-up
50-0863	Smooth	2008-up
50-0861	Inner Strut	2008-up



Rear Fender Strut Cover Trim fits 2006-up FXST, 2007-up FXSTC. VT No. 50-0110

FXD-FXR



50-1071



50-1211



50-1064



50-1106



50-1212



50-0649



50-1115



50-1123



50-0852



50-0865

Chrome Fender Strut Sets with signal and mount holes.

VT No.	Fits	Type
50-1064	1982-86 FXR	Strut
	1983-91 FXRT-FXRP	Strut
50-1106	1987-94 FXR except FXRT-FXRP	Strut
50-1115	1997-06 FXDWG	Cover
50-1123	2006-up FXD	Cover

FLST Models

50-1071	Replica	1986-99
50-1211	Replica	2000-02
50-1212	Replica	2003-up
50-0649	Replica	2007
50-0652	Replica	2008-up
50-0865	Inner Strut	2008-up
31-0652	Rear Fender Nut Inserts, 4 pack	



50-0865

61-0228 Chrome Struts, 1986-99 Three Holes




61-0228

Strut Bolt Set



9920-46

Chrome Allen Fender Strut Bolt Kits include necessary allen head bolts, washers and nuts for fender mounting.

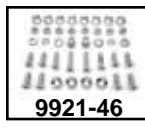

9921-46


VT No.	Year	Model
37-8978	1986-99	FXST
9920-46	1986-99	Softtail (Four hole strut)
9921-56	1986-99	(6 hole Strut)
2044-26	2000-up	Softtail models
2043-26	2000-up	Softtail models (Low Profile)




Fender Strut Mount Kit includes chrome socket bolts, special nuts, washers and pasties chrome covers to match cylinder head bolt dome covers. Fits 1986-99 FXST. VT No. 37-8907



9920-46

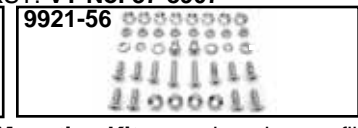

9921-56

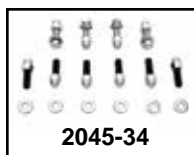

2045-34

Chrome Rear Fender Support Mount Kit to replace original hardware.

VT No.	Year/Model	Style
37-8978	1986-99 FXST	Allen
2045-34	2000-06 FXST	Acorn

Rear Fender Strut Chrome Mounting Kit are unique low profile allen hardware kits to mount struts to fender.

VT No.	Item
9920-46	Mount 4 hole struts on 1986-99 5-speed Heritage Softtail and Fat Boy, pictured.
9921-56	Mounts 6 hole struts on 1986-99 FXST, FXSTC, FXSTS and Bad Boy.
2043-26	FX and FL Softtail 2000-up except FX Deuce