





Billet Engine Mount



Chrome Billet Top Engine Mount fits 1948-99 Big Twin motors.

VT No.	Type
31-0709	Smooth
31-1275	With holes

Engine Mount Bolt

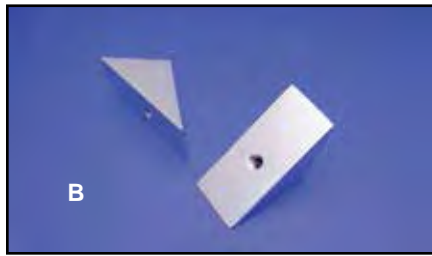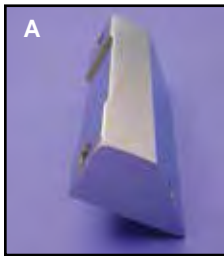

Chrome Front Engine Mount Bolt Mount Block. Front motor mount bolts thread into this regulator mount block.

VT No.	Type
31-0635	A
31-0739	B



Chrome Top Motor Mount Spacer Set for spacing out top mount or wide tire conversions. Spacers have $\frac{7}{16}$ " inner with $1\frac{1}{8}$ " outer diameter.

VT No.	Thickness
37-0438	$\frac{5}{8}$ "
37-0419	$\frac{3}{4}$ "
37-0419T*	$\frac{3}{4}$ " *Note: Zinc
37-0437	$\frac{1}{2}$ "

Upper and Lower

VT No.	Years	Model	Type
9854-28	1984-99	FXST	Chrome
9855-28	1984-99	FXST	Zinc
9927-28	1984-99	FXST	Allen
9927-28-P	1984-99	FXST	Polished Allen

Lower Only

9859-20	1989-99	FXR	Chrome
9928-20	1989-99	FXR	Allen
9928-20-P	1989-99	FXR	Polished Allen

1999-up Front Only

9937-20	1999-up	FXD	Chrome Allen
9936-28	1999-up	FXD	Acorn

Lower Front

2116-15	2000-up	Softail	Chrome Allen
2117-15	2000-up	Softail	Chrome Hex
2118-15	2000-up	Softail	Zinc Hex

Trans to Motor Mount TC-88, FXD

9934-8	1999-up	FXD	Acorn
9935-8-P	1999-up	FXD	Polished Allen



Chrome Top Engine Mount Spacer & Bolt Kit for offset motors.

VT No.	Thickness
37-1012	.50"
37-1013	.75"



Chrome Allen Screw Kit connects motor mounts, front, top and rear to frame on models listed below. Knurled.

VT No.	Fits
37-9180	1991-up Dynaglide
37-9185	1987-90 FXR
37-9186	1991-up FXR
37-9187	1984-99 Softail, 1985 FXWG-FXE
9937-20-P	1991-up FXD Front Mount