





Saddlebag Hardware

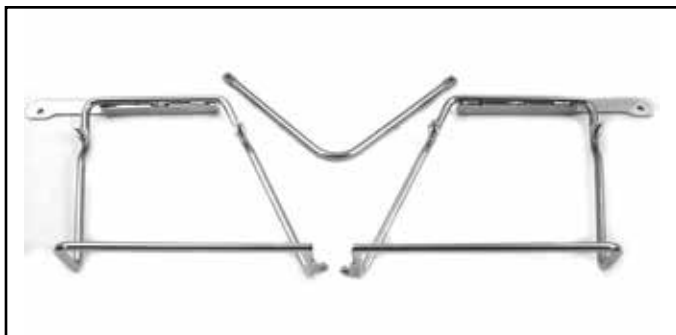

Saddlebag Bracket Set includes left and right brackets with rear saddlebag stabilizer bracket for fiberglass saddlebags. Saddlebag bracket set, bottom rail extends out 3½" measuring to the center of the rail. Fits saddlebags that have underneath groove. Fits 1986-up FLST only.

VT No. 49-2752

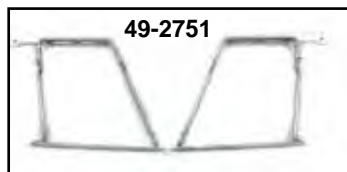


49-2751



49-2542

Saddlebag Mount Kit. Adapts VT No. 49-2521 fiberglass bag set to FXST-FLST models 1986-05. Instructions included. Saddlebag mounting bracket is not included with mount kit use 49-2752 for customers who have bags without brackets. Requires turn signal bracket 31-4006 for use.

VT No.	Year	Finish
49-2751	1986-05	Chrome
49-2542	1986-05	Zinc
49-0462		Bracket Zinc

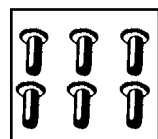

Fiberglass Saddlebag Rivets, pack of 50.

VT No.	OEM	Length
37-0566	90965-63	5/16"
37-0567	90966-67	1/4"
37-0568	90967-64	3/8"



31-9913




31-9986

Directional Signal Relocation Kits includes special hardware and extension for models listed to provide clearance for saddle bags.

VT No.	OEM	Fits
31-9913	90504-82A	1982-89 FXR
31-9986	68548-87	1986-up FXST-FXSTS




Caliper Guard mounts to axle and keeps saddlebags out of wheels on 1986-up Softail, zinc plated.
VT No. 48-0177

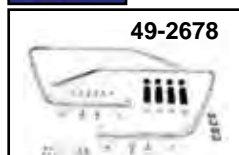

49-2678

Wyatt Gatling Saddlebag Kit includes set of chrome saddlebag adapter brackets for quick release mounting, four bail head studs, four receptacles, four cushions, four grommets, and mounting hardware for the left and right side saddlebags. Fits 1984-up FXST, 1986-up FLST.

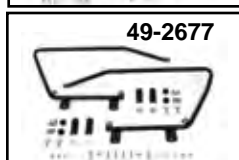

49-2677

VT No.	Finish
49-2677	Black
49-2678	Chrome



31-9916




31-9917



31-0967



31-0968

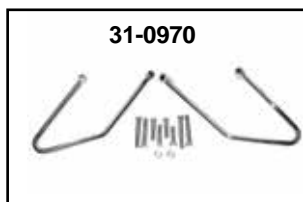


31-0970



31-9912



31-0818

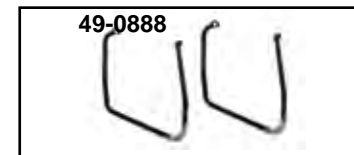


49-0888



49-0889



31-0361

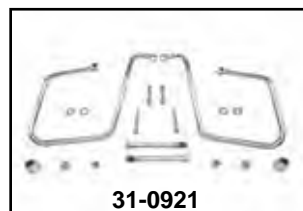

31-0921

Chrome Saddlebag Supports are designed to fit the contour of the fender struts and protect your bags from the brake caliper and swing arm.

VT No.	Bolt	Year	Model
31-9916	2	1984-99	FXST, FLST
31-0361	2	1984-99	FXST
31-9917	1	1984-99	FXST, FLST
31-0967	2	2000-05	FXST, FLST
31-0968	1	2000-up	FXST, FLST
31-0970	2	2006-10	FXST, 2007-up FLSTF
31-9912*	2	1982-94	FXR
31-0818	2	1991-07	FXD
		1996-up	FXDWG
49-0888	2	All	Black
49-0889	2	All	Chrome
31-0921	2	2008-up	FXD

*Note: 1982-89 models require VT No. 31-9913 relocation kit.