

Frame Repair Tabs to weld on to repair stock frames.

VT No.	#	Fits	Type
51-0578	C	1958-84 FL	Brake Tee
51-0579	D	1958-84 FL	Rear Pipe
51-0570	F	1965-84 Big Twin	Upper Shock Mount, pair
51-0569		1958-64 Big Twin	Upper Shock Mount
51-0517	G	1969-up Big Twin	Neck Tab for Lock
51-0506	H	—	Gusset Plate
51-0599	I	—	5th Mount Transmission
51-0145		1936-57	Plate Set

Coil Mount Block Set has a with $\frac{3}{8}$ " —24 UNF thread.

VT No.	Item
51-0532	Block Set
8824-8	Stud Set
8824-8T	Stud Set



Lower Tank Mount for 1955-84 FL.

VT No.	Item
51-0632	Welded Mount
51-0639	Cross Bracket
51-0666	Welded Set

Weld In Lock Insert is cast steel for 1936-84 frames.

VT No.	Item
51-0958	Casting
51-0349	Insert with lock



Steel Skid Plates replace 24490-36, 1936-99 Big Twin.

VT No	Finish
42-0101	Chrome
42-0098	Stainless
42-0777	Chrome
42-0117	Black
42-5025	Black, Replica

Weld On Dowels are tapped for $\frac{5}{16}$ " — 24 UNF thread.

VT No. 51-0858


51-0431	45 Rear Fram Cross Brace
51-0437	Rear Forging Mount
51-0439	Front Forging Engine Mount
51-0459	Rear Frame Motor Mount
51-0527	Rear Frame Motor Mount, Front and Rear
51-0119	Rigid Frame Tube Set, 1948-53
51-0120	Rigid Frame Tube Set FL 1954-1957
51-0144	Raw rigid frame seat post plate set
51-0172	Lower Frame Front Motor Mount
51-0535	Triple Tree Neck Frame Tab
51-0551	Frame Coil Mount Weld-On Type
51-0618	Fat Bob Tank Mount Kit

Frame Component





Front Side Car Frame Loops fit rigid frames for replacement and repair, will accept 1" diameter tubing, pair, front lower mount, each. Front engine mount is one piece forged with three holes on left and two holes on for brake side. Components must be welded on.

VT No.	Item
51-0523	Side Car Loop Set, Straight Leg, Right and Left
51-3157	Side Car Loops, Right and Left
51-0585	Side Car Loop Set, Wish Bone, Right and Left
51-3647	1936-47 Front Engine Mount
51-0595	1936-47 Front Engine Mount
51-0526	1948-84 Front Lower Mount
51-0500	Cast Side Car Mounts
51-0068	Casting Number Plate

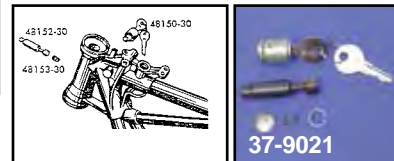

Complete Steering Head Lock Assembly Kit includes cylinder lock, two keys, pin, frame plug, spring and plunger.

VT No.	Item
37-9021	Complete Kit
51-0610	Trim Ring

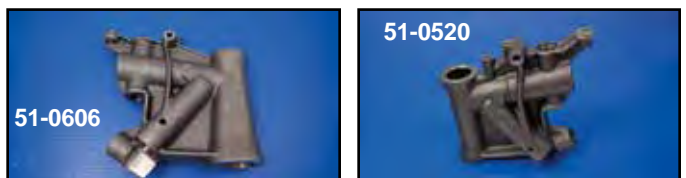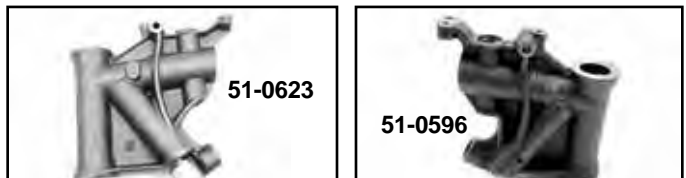

Big Twin Neck Forgings machined to accept stock diameter tubing. 51-0520 features late number boss and tab for pad lock.

VT No.	Year	Rake
51-0623	1936-40	28°
51-0596	1941-45	29°
51-0606	1946-E47	30°, Bull Neck
51-0525*	1948-68	30°
51-0520	1969-87	30°

*Note: Machined to accept neck lock tumbler 37-9021.

Top Frame Casting fits 1948-65 Panhead.

VT No. 51-0067

1936 Style Side Car Mount Set and Cross Bar.

VT No. 49-1320