




# 1948-84 Tank Mount



**Mounting Kit for 1936-84 Big Twin with Bobbed Style Tanks** includes special washers, studs, and bolts. VT No. 38-0200 includes spacers.

VT No.	Type	Finish
38-0200	Stock	Zinc
9891-18	Stock	Chrome
9892-18	Stock	Cadmium
9893-18	Stock	Parkerized
2524-2	Allen	Chrome
12-2123	Rear Mounting Stud Only 1936-84	

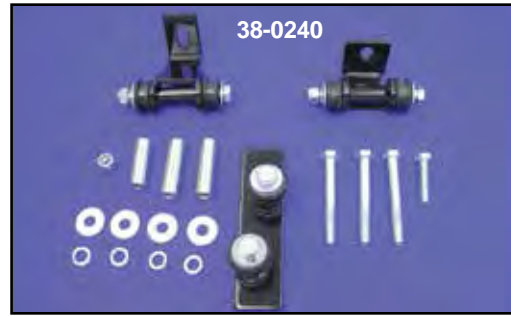

**Mounts for Bob Tanks.** "Our Original Frame Saver Kit" may be welded to all 1936-84 Big Twin frames, stock or custom, to replace original brackets.

VT No.	Item
51-0100	Complete Kit, 1936-47
51-0121	Complete Kit, 1948-84
51-0507	Rear Mount Clips, pair



**Speedometer Mount Frame Casting** must be welded.  
**Note:** Casting has provision for steering damper pin. Fits 1948-84 FL.  
VT No. 51-0067




**Small Type Gas Tank Mount Horseshoe** can be used on 1 piece FX or quick bob tanks. Stock OE replacement type. Rubber measures 2 $\frac{7}{8}$ "W x 2 $\frac{1}{2}$ "H. OEM No. 61139-73A. Fits 1973-84 FX.  
VT No. 28-0644

**Frame Saver Gas Tank Mount Kit** includes front and rear tank mounts. to mount Bobbed tanks to custom or original frames. Temporarily attach one tank piece by clamping bracket for a quick check of tank placement on custom applications. Bracket assembly can then be welded in place.

VT No.	Year	Type
51-0521	1936-84	Stock
51-0674	1936-84	Stock
51-0615	1985-99	Flat Side
38-0240*	1985-99	Flat Side

\*Note: 1958-84 when installing flat side

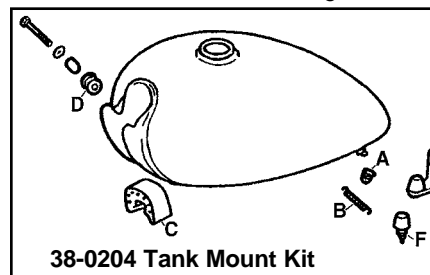

38-0204 Tank Mount Kit



**FX Tank Mount Kit** mounts one piece FX or Quick Bob tanks on 1973-84.

VT No.	#	OEM	Item
38-0204	A-F	—	Complete Kit
38-0220	A&B	—	Spring and Clip Kit
38-0205	A	61546-74	Spring Clip
13-0155	B	61550-73A	Spring
28-0614	C	61139-73	Horseshoe, Large
28-0615	D	61152-65P	Rubber Bushing
28-0617		62123-66	Button Bumper
28-0616	F	61562-66	Cup Bumper

