



1986-90 Dress Up Kit




Left Side



Right Side

V-Twin Chrome Dress Kits for 1986-90 XL models includes chrome primary cover with inspection covers, cam, rocker box, master cylinder and sprocket covers. Also included is chrome brake pedal and chrome shift lever to add a finished touch. Hardware for installation included.

VT No.	Type
43-0316	With brake/shifter pedal
42-0847	Without brake/shifter pedal
42-8690	With brake/shifter

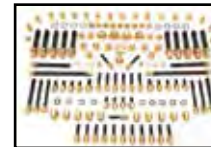

1986-90 Gold Show Kit includes all acorn nuts for engine.
VT No. 7919-G

Die Cast Primary Covers are manufactured from a casting process. It is the nature of parts produced from this process to have small random subsurface imperfections that can be uncovered during the polishing process. These may appear as very small cosmetic imperfections after chrome plating. We also do not polish in areas that are not readily visible once assembled on the motorcycle or by polishing machines such as small depressions or tight corners. As these conditions are common in polished and chrome-plated castings, a reasonable standard of acceptability has been established to bring you the highest quality product at an affordable price. This part meets Perma Chrome™ cosmetic standard. The aforementioned cosmetic conditions are considered reasonable for this part and are not considered warrantable.

Tappet Base Cover



Chrome Cylinder Base Cover fits the area cylinder base on left side of engine. Fits 2004-up.
VT No. 42-1171



42-1171 Installed



Chrome Tappet Covers fit 1986-90, four piece. Presses onto tappet block.
VT No. 42-0113



42-0447

Chrome Tappet Base Cover is die cast one piece covering the area from the pushrod tube base to the cam cover. Fits 1991-2003.
VT No. 42-0447



Chrome Tappet Bar Base Cover. Fits 2004-up XL.
VT No. Item
10-0565 Base Set
2224-8 Screw Set
15-1273 Gasket and Pushrod Tube O-Ring Kit



Chrome Tappet Block Cover Set features contour for perfect fit over existing stock style lifter blocks, securely held in place by 4 chrome allen screws supplied. Pushrods must be removed for installation. Original design by Motoy-Cycle™ Accessories. 1957-85 XLH-XLCH.
VT No. 42-0115