



# Chrome Trim




**Dress Up Set** features brilliant chrome covers to fit over original aluminum covers which are formed to mirror the contour for a skin tight fit. Order derby, and points cover separately for 42-1052 and 42-1051.

**VT No. Year**  
**42-1050** 1991-03  
**42-1052\*** 1991-03  
**42-1051** 2004-up  
 \*Note: Open Derby Access



**Sprocket Cover Kit and Belt Guard.** Fits 2004-up XL.  
**Chrome Black**  
**43-0388 43-0389** Outlaw Sprocket Cover Kit  
**27-0832 27-0833** Outlaw Belt Guard

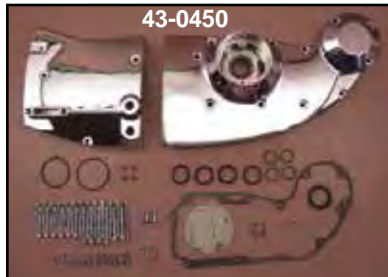

**Chrome Right Side Cam Cover/Sprocket Cover Set** for XL's includes both pieces with gasket and chrome allen screws for assembly.

**VT No. Year**  
**43-0449** 1986-90  
**43-0450** 1991-2003



**Cam Cover Trim** installs over original cover for 2004-up XL.  
**VT No. Finish**  
**42-0138** Alloy  
**42-0137** Black

# Cam Cover Trim



**Form Fitting Chrome Steel Covers** fit over stock cam cases on XL models. No need to remove cam case or disturb cams or gears. Covers held in place by existing screws and related hardware as supplied. Note: 42-9962 is kickstart only. All other numbers are for electric start.

**VT No. Fits**  
**42-9961** 1971-78  
**42-9962** 1971-78  
**42-9968** 1979-80  
**42-9963** 1981-82  
**42-0110** 1983-90  
**42-9975** 1991-2003  
**42-0933** 2004-up

