



27-0587


**Mega Footpeg Kit** features billet clamp set to attach to 1 1/4" engine bars.  
**VT No. Item**  
**27-0587** Footpeg Kit  
**27-0698** Bracket Set

# Chrome Front Engine Bar

**FOR ENGINE BARS LISTED ON THIS PAGE**  
**WARNING:** ENGINE/FRAME BARS MAY PROVIDE LIMITED LEG AND COSMETIC VEHICLE PROTECTION UNDER UNIQUE CIRCUMSTANCES (FALL OVER WHILE STOPPED, VERY LOW SPEED SLIDE). THEY ARE NOT MADE NOR INTENDED TO PROVIDE PROTECTION FROM BODILY INJURY IN A COLLISION WITH AN AUTOMOBILE OR ANY OTHER OBJECT.




27-0660  
Installed

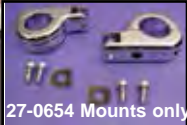

27-0654 Mounts only



27-0654

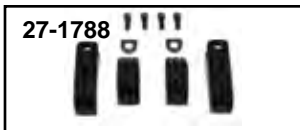

27-1788

**Chrome Billet Engine Bar Footpeg Mount Kit** fits on 1 1/4" front engine bars with male pegs.


**VT No. Item**  
**27-0660** Kit  
**27-0654** Chrome, Mounts Only  
**27-1788** Black, Mounts Only 1 1/4" Bar



27-0032

**Chrome Footpeg Mount Kits** include clamp set and extension bars to accept male pegs.

**VT No. Size**  
**27-0032** 1"  
**27-0033** 1 1/8"  
**27-0034** 1 1/4"

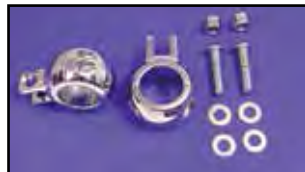

**Bar Clamps** fit 1 1/4" engine bars to mount male footpeg sets.  
**VT No. 27-0892**



**Footpeg Mount Kit** allows male-type pegs to be mounted to 1 1/4" diameter engine bar.  
**VT No. 27-0651**




51-0881  
1986-03  
style



51-0886  
1956-81  
style




51-0939

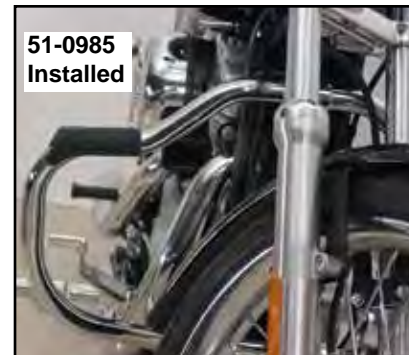

51-0985  
Installed

## XLH-XLCH 1 1/4" Diameter

VT No.	OEM	Fits
51-0886	49042-56A	1956-81
51-0881	49018-88C	1986-03
51-0888	With Pads	1986-03
51-0939	49060-04	2004-up
51-0985	W/Pads	2004-up

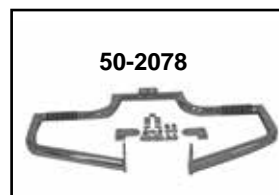

50-2078

**Lindby Custom Front Highway Bars** with footpegs feature 1 1/4" tubing and built in O-Ring pegs. Fits XL models without forward controls.

**VT No. Fits**  
**50-2078** 2011-up  
**14-0977** Replacement O-Ring