




Footboard

Footboard Mat

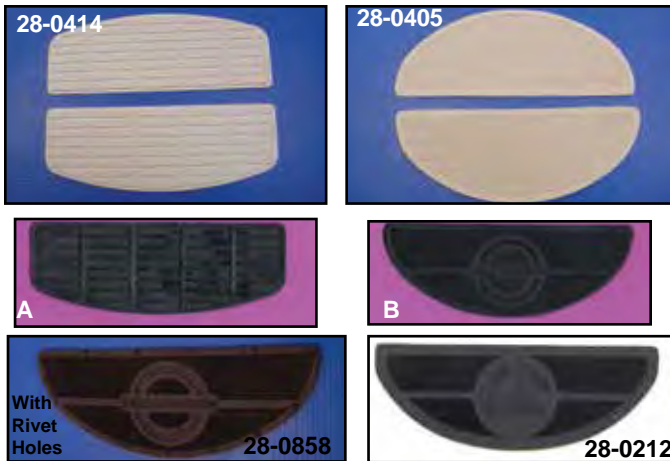


Footboard Mats sold in pairs. Must be affixed by adhesive or rivets, on earlier models.

| VT No. | # | Year | Color |
|---------|---|---------|----------------------|
| 28-0413 | A | 1966-up | Black |
| 28-0414 | A | 1966-up | White |
| 28-0429 | A | 1966-up | Teal |
| 28-0430 | A | 1966-up | Orange |
| 28-0431 | A | 1966-up | Blue |
| 28-0432 | A | 1966-up | Yellow |
| 28-0404 | B | 1940-65 | Black, H-D |
| 28-0672 | B | 1940-65 | Black, Plain |
| 28-0858 | B | 1940-65 | Black, H-D |
| 28-0672 | B | 1940-65 | Black, H-D |
| 28-0405 | B | 1940-65 | White, Plain |
| 28-0212 | | 1940-65 | Black |
| 28-0459 | | 1940-65 | Straight Rib Design |
| 28-0868 | | 1941-65 | Footboard Mat, black |




Footboard Rivets for use 1914-65 replaces 50616-14, 28 pieces.

| VT No. | Finish |
|---------|-----------|
| 27-0597 | Black |
| 27-1272 | Stainless |




Footboard Inserts

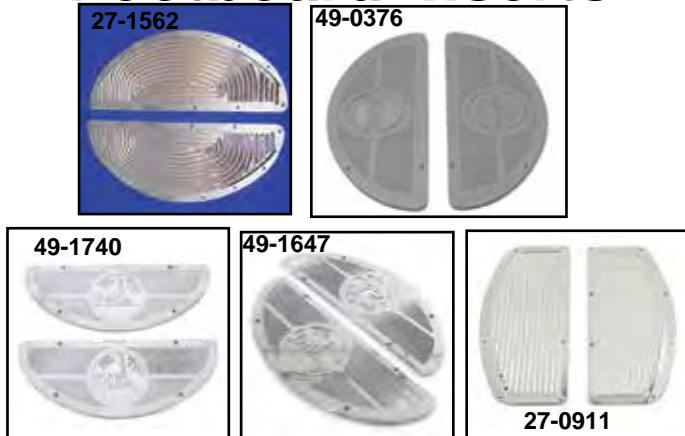

Half Moon Inserts. Pairs.

| VT No. | Style | Finish |
|-------------------------|--------------|--------|
| 27-1562 | Rib | Chrome |
| 49-0376 | Deluxe | Alloy |
| 49-0436 | Deluxe | Chrome |
| 49-1740 | World's Fair | Alloy |
| 49-1647 | World's Fair | Chrome |
| D-Shaped 1966-73 | | |
| 27-0911 | Rib | Chrome |

Insert

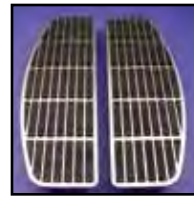

Chrome Footboard Trim. Footboard Set inserts are fitted to an iso-mount footboard top to fit 1974-up FL-FLT-FLST.
VT No. 27-1705



Chrome Billet Footboard Pad Set features Billet construction with built in rubber strips on surface. Rubber Iso-Mount included which plug into stock board on 1980-up FLT, 1986-up FLST.
VT No. 27-0924



Chrome Billet Footboard Pads include Iso bushings for 1966-84 Big Twins.

| VT No. | Item | Year |
|---------|---------------------|---------|
| 27-1054 | Board Set with pads | 1966-84 |
| 27-0570 | Pad Set | 1974-05 |



27-1574



27-1666




Bottom


Upper Footboard Plate for 1974-91. Includes eight iso-buds with two upper plates and rubber mats, 1992-up has iso-buds molded in for updated design.

| VT No. | Fits | U/M |
|----------|-------------------------------------|------|
| 27-1574 | 1974-91 FL-FLT | Pair |
| 27-1666* | 1992-up FLST-FLT 1980-up Touring | Each |

*Note: Can be used on all 1974-up type Iso footboards.



28-0416



Iso-Mount Buds. Set of 10 for footboards, 1974-up FLH-FLT.
VT No. 28-0416

Iso Boards and Replacement Parts first offered by V-Twin in 1985.