




Chrome 'D' Driver Footboard

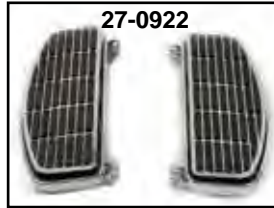

Chrome 'D' Shaped Footboard Set. Fit 1966-84 FLH, 1941-73 FL. Pair.
VT No. Style
27-0922 Iso
27-1799 Flame



Chrome 'D' Shaped Footboards include rubber pads. The Iso boards feature a raised footboard pad with anti-vibration rubbers. Sold in pairs.

VT No.	Year/Model	Type
27-0904	1966-73 FL	Solid
27-0826	1966-72 FL	Black
27-1545		Solid
27-0903	1966-85 FL	Iso Type
27-0918	1966-85 FL	Kit with brackets
27-0749	1966-85 FL	Pans Only

"D" Shape Billet Footboard Set is chrome with black molded rubber insert.


VT No.	Shape
27-1204	Diamond
27-1203	Rail
27-1205	Flame



"Chain Drive" Chrome Half Moon Footboards are 1940's style with welded chain trim. Order rubber pads or chrome inserts separately.
VT No. Item
27-0921 Board Set
27-0371 Kit

Vintage Footboard Sets feature classic half moon design with "shaker" Iso-mount cushion area. Black pads included.

VT No.	Fits	Type
27-0912	1940-84 FLH	No Bullseye
27-0927	1940-84 FL	Bullseye
27-0863		Rail Trim

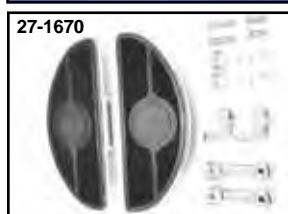

Adjustable Footboard Kits permit a full 7" fore-aft adjustment along with angle and height adjustability. Kits are designed to fit 1980-86 FXWG, 1984-up FXST and 1990-up FLST and fit wherever a male clevis style footpeg mounts. Complete w/hardware.

VT No.	Item	Type
27-1595	Half Moon	Shaker
27-1594	D Style	Shaker
27-1612	D Style	Solid
27-1670	Half Moon	Solid
27-0784	—	Brackets



'D' Shaped Footboards. Chrome finish unless noted.

VT No.	Fits
27-0798*	Pans, 2002-up FLT
27-0992	Iso, 2006-up FLST, FLT
27-0923	Iso 1980-up FLT, 1986-up FLST
27-0906	1980-up FLT, Iso Type 1986-up FLST
27-0914	Black Iso 1980-up FLT, 1986-up FLST
27-1000	Black Iso, 2006-up FLT, FLST
27-1798	Flame, 1980-up FLT, FLST



*Note: Extends the footboard forward by 1 inch from stock location. Require the re-use of upper floorboard pan.