

Strutless Rear Fender



2mm Thick Steel Strutless Rear Fenders for Softtail models.

VT No.	Width	Tire
50-0216	8¾"	200
50-0251	9"	200
50-0217	10"	230
50-0242	12½"	280-300

50-0242 use 50-0248 extension brackets to mount 50-0242 to wider frames



Dresser Style Rear Fender undrilled, fits models with modification.

VT No.	Width
50-0942	6.5"
50-0471	7.5"
50-0860	8.0"
50-1517	8.6"
50-1525	9.0"
50-1190	9.0"

Note: All Items Shipped with a Raw Finish may have some oxidation (rust on surface)!

Rounded Fenders



All Fenders are Steel!
Ready for mock up...in raw finish



Round Profile Chopper Fender features round British style, raw finish.


Smooth	Ribbed	Width
—	50-0281	4"
—	50-1586	4"
50-0584	—	5"
50-0519	50-1579	6"
50-0611	50-1578	7"
—	50-1580	8"
—	50-1581	9"
—	50-1582	10"



7" Rib Fender installed on Rigid Frame with 31-0559 chrome bars

All Fenders are Steel!

Hardware

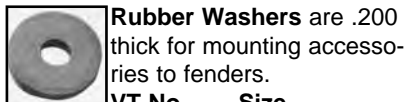


Rubber Washers are .200 thick for mounting accessories to fenders.



VT No.	Size
37-8869	¼", 20 pack
37-8870	⅝", 20 pack



Weld On Mount Spool with ⅝" x 24 thread.
VT No. 51-0588

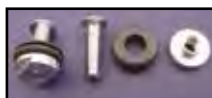

Custom Fender Mount Kit includes rubber bushings.
VT No. 31-0718

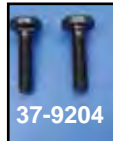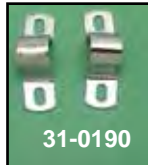

Fender U Clamp is used on 1936-57 Rigid models. Secures rear fender to frame cross tube. Replaces 59800-36.

VT No.	Finish	Note
31-0190	Chrome	Order chrome carriage bolts separately
31-0457	Parkerized	Rear Fender Mount U-Clamps
37-9204	Parkerized	Bolt set, when using rear frame bar
37-1507	Chrome	Carriage bolts



Flat Washers used for mounting fenders and rails. Measures 1¼" diameter with a ⅝" bolt hole, sold in 10 packs.
VT No. 40-0604

MULTI FIT/CHOPPER